



ABO ***valve, s. r. o.***

Safety Instructions

**for installation, operation and
maintenance
of ball check valves**



1. All safety instructions should be read carefully; otherwise all manufacturer's warranties become null and void. All installation work and activities during the operation or removal of the valve must be performed by professionally trained staff. The manufacturer is available for any questions – see contact details.



2. The valve may only be used if the medium pressure and temperature parameters comply with the type specifications for the type of valve concerned.



3. It is necessary to ensure that the material of valve components that come into contact with the transported medium is suitable for the medium concerned.



4. Before dismantling the valve from the piping, the piping must be without pressure (the liquid drained, if possible)!



5. When installing the flanged ball check valve, gasket should be inserted between the valve and flanges. The piping flanges must have flat and smooth sealing surfaces e.g. B shape according to EN 1092.



6. Prior to the installation of the valve, the inner area has to be clean, free of any mechanical impurities (scales, slag, etc.).

Other Information

These regulations as well as other above-mentioned documents and further information – also in other languages – are available at www.abovalve.com or at the following address:

ABO valve, s.r.o.
Dalimilova 54b
783 35 Olomouc - Chomoutov
Czech Republic

Tel. 00420 585 223 955
Fax 00420 585 223 984
abovalve@abovalve.com
www.abovalve.com

Last revision: 5 January 2011